

Mini Environment Meter
Series

Mini PM2.5/PM10 Particle Counter



Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand

Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com

Contents

Page

1. Introduction.....	4
2. Features.....	4
3. Front Panel and Bottom Description.....	5
4. Specifications.....	6
5. Power on or Power off.....	7
6. Measurement Mode.....	7
7. Setup mode.....	8
7-1. Date/Time setup.....	8
7-2. Alarm setup.....	8
7-3. Sample Time.....	9
7-4. Unit(°C/°F)setup.....	9
7-5. Memory View.....	9
7-6. Mass/Particle setup.....	10
7-7. Auto Power Off setup.....	10
8. Shortcut keys.....	11
9. Product Maintenance.....	11
10. Cautions.....	11



Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand

Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com

1. Introduction

Thank you for purchasing this Mini Particle Counter, This Mini Particle Counter with 2.0" color TFT LCD display provides fast, easy and accurate readings for particle counter, particle mass concentration, Air temperature and relative humidity. The series products is a delicate and practical hand-held instrument, the real scene and time can be displayed on color TFT LCD. Any memory readings can be recorded in meter. It Would be the best instrument for environment protection and energy save.

2. Features

- 2.0" TFT Color LCD display
- 220*176 pixels
- Simultaneously measure PM2.5 and Pm10
- Air temperature and humidity
- Real time clock display
- Analog bar indicator
- Auto Power Off

 
 
 


*Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand*

*Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com*

3. Front Panel and Bottom Description

- 1-Particle Sensor
- 2-LCD Display
- 3-Page up and Setup button
- 4-Page down and ESC button
- 5-Power ON/OFF button
- 6-Measure and Enter button
- 7-Memory View button
- 8-USB charge interface
- 9-Air-bleed hole
- 10-Bracket fixing hole

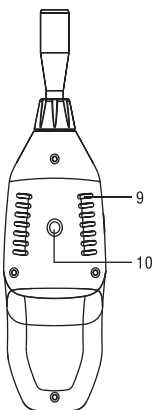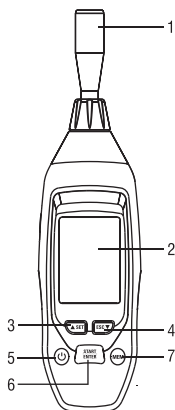

4. Specifications

Particle Counter		
Channel	2.5um, 10um	
Mass Concentration	PM2.5: 0 ~ 2000ug/m³	
	PM10: 0 ~ 2000ug/m³	
Resolution	1ug/m³	
Air Temperature Measure		
Air Temp Range	0 ~ 50°C/32 ~ 122°F	
Resolution	0.1°C/°F	
Basic Accuracy	± 1°C/2°F	
Humidity Range	0 to 100%RH	
Resolution	0.1%RH	
Basic Accuracy	± 5%RH	0 ~ 20%RH
		80 ~ 100%RH
	± 3.5%RH	20 ~ 80%RH



Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand

Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com

5. Power on or Power off

 
 
On the power off mode, press and hold  button, until the LCD is on, then the unit will power on.

On the power on mode, press and hold  button, until the LCD is off, then the unit will power off.

6. Measurement Mode

On the power on mode, you can press the  button to start measuring PM2.5 and PM10, the top left corner of the LCD display "Counting", the top right corner of the LCD display count down, LCD main display PM2.5 and PM10 data and temperature & humidity readings are at the bottom of LCD.

Press the button again to stop the measurement, the top left corner of the LCD display "Stopped", The LCD display the last measurement data. Data will be automatically saved to the instrument memory, which can store up to 5000 data.

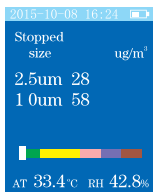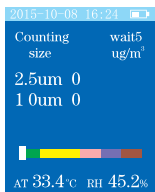


Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand

Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com

7. Setup mode

 Powering on the instrument, Long press button  to enter into the system setup mode when not do measurement operation, as shown below:

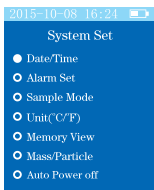

Press the  button and the  button to select the menu option needed, then press button  to enter into the appropriate settings page.

7-1.Date/Time setup

After entering into Date/Time setup mode, press  button and  button to select the value, press  button to set next value. After finished the setup, please press button  to exit time setting mode and returns to the system settings mode.



 
7-2.Alarm setup

Press button  and button  to activate or deactivate alarm function.



7-3.Sample Time

Press **SET** button and thes **ESC** button to select the sampling time, sampling time can be select by 30s,1min,2min or 5min.

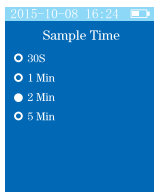


7-4.Unit(°C/°F)setup

Press **SET** button and the **ESC** button to select the temperature unit (°C/°F).




7-5.Memory View

 Press button **SET** and button **ESC** to select storage catalog, press **START ENTER** button to view data in selected storage catalog.
5000 sets of data can be stored in the instrument.

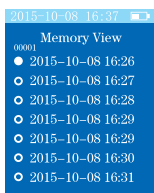

7-6.Mass/Particle setup

 Press  button and the  button to select the mode particle concentration and mass concentration mode.

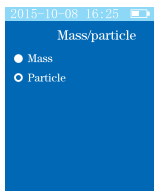

7-7.Auto Power Off setup

 
Press button  and button  to set the auto-off time.

Disable: Power off function is deactivated.

3MIN: Automatically shutdown in 3 minutes without any operations.

10MIN: Automatically shutdown in 10 minutes without any operations.

30MIN: Automatically shutdown in 30 minutes without any operations.

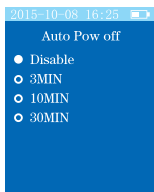

Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand

Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com

8. Shortcut keys

Press the **MEM** button to quickly enter the storage data directory view, select the directory button to view the specific data.

In the main LCD interface, pressing and hold the **ESC** button then press the **MEM** button until the sound of a buzzer delete the stored data.

9. Product Maintenance

- Maintenance or service is not included in this manual, the product must be repaired by professionals
- It must use the required replacement parts in maintenance
- If the operating manual is changed, please instruments prevail without notice

10. Cautions

- Do not use in over dirty or dusty environment. Inhalation of too many particles will damage the product.
- To ensure the measure accuracy, please do not use in an over fogged environment.
- Do not use in explosive environment.
- Follow the instructions to use the product, privately take apart the unit is not allowed.



*Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand*

*Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com*



Eastern Energy Co., Ltd.
40/4 Vitoondumri Rd., Banbueng
Banbueng, Chonburi, Thailand

Tel: 66-3844-6117
sale@ete.co.th
www.eastern-energy.com



Rev.161108